Installing the Chassis Rack Mounting Rails

Before Installing the Chassis Rails

- 1. Unplug the power cord from the from the power supply.
- 2. Secure the chassis cover.
- 3. Remove all external devices and connectors.

Installing the Inner Chassis Rails

- Locate the pair of inner rails and two sets of screws (6 screws per set) that are included in the shipping package.
- 2. Remove the chassis feet and top cover.
- 3. Align the inner rails against the chassis as shown.

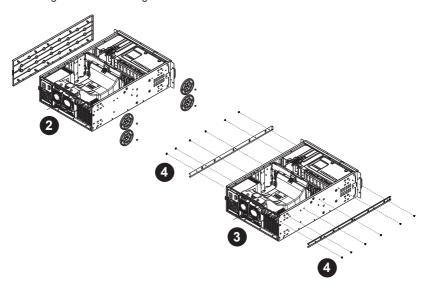


Figure 1: Installing the Inner Chassis Rails

4. Secure the inner rails onto the chassis with the screws provided. Ensure that the inner rails are mounted flush with the edge of the chassis.

Installing the Outer Chassis Rails

 Locate the two pairs of outer rails. Each pair consists of one middle rail, one end bracket and one end rail as shown

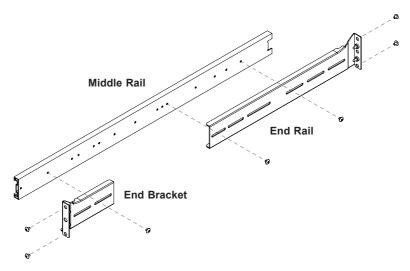


Figure 5-2: Assembling the Outer Chassis Rails

- Insert the end bracket and the end rail onto the middle rail and secure them with the screws as shown.
- 3. Install a set of outer rail assemblies to each side of the rack and secure them with the screws provided.
- 4. Check that both sets of inner rails are securely attached to the chassis.
- 5. Check that both sets of outer rails are securely attached to the rack.
- 6. Insert the inner rails on the chassis, into the outer rails on the rack.
- 7. Gently slide the chassis into position within the rack.

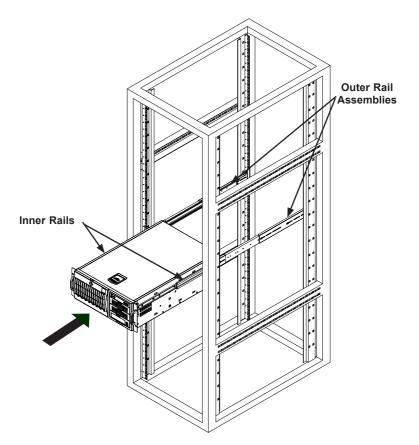


Figure 3: Mounting the Chassis into a Rack