

# Installing Areca addon RAID Controller on Falcon 40cq Step-by-Step

## 1- Installing Areca RAID Controller into the system

- a. Turn off system
- b. Unplug power cord
- c. Open system cover
- d. Unscrew and remove the Panel Cover at the back of the system




Remove this Panel Cover

Unscrew here

Once you are PROPERLY GROUNDED\* remove the card from the Anti Static bag .


\*This is achived with the use of an Anti Static wrist strap or other Anti Static device

- e. Plug Areca addon into PCI Express slot (Top slot J4 recommended)

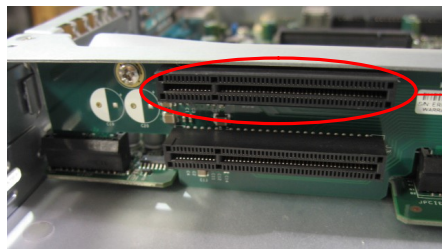

Slot J4

- f. Connect cable from Areca controller to chassis backplane

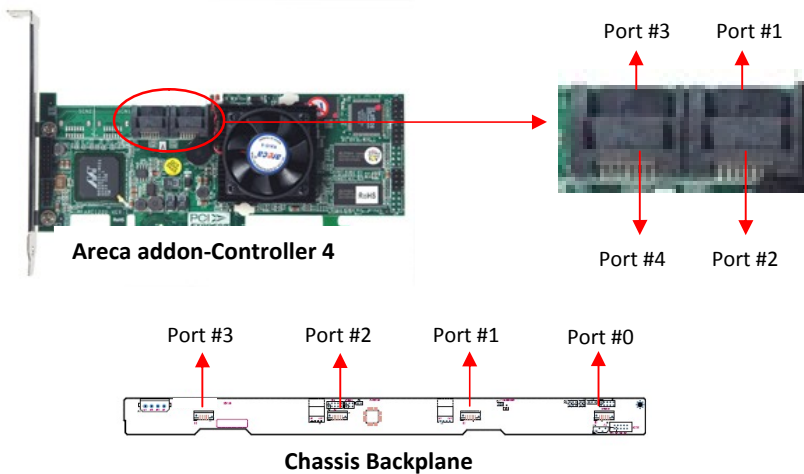

Areca Controller Port#	goes with	Chassis Backplane Prot#
1	→	0
2	→	1
3	→	2
4	→	3

Continued..

- g. Screw back the Panel at the back of the system
- h. Close system cover
- i. Plug in Power Cord
- j. Start up system

## 2- RAID building instruction

- A. Press F6 when system booting up
- B. Login RAID controller. Verified pass word is 0000 (four zero digits)
- C. Create RAID Set for all hard drives
  - a. Select RAID Set Function → Pres Enter
  - b. Select Create RAID set → Press Enter
  - c. Mark all hard drives
  - d. Modification of controller name and parameter (optional)
  - e. Hit Esc Key to save configuration
- D. Create Volume Set 00 and then volume set 01
  - a. Select Volume Set Function → Press Enter key
  - b. Select Create Volume Set → Hit Enter
  - c. **Volume Name**: name the volume as needed
  - d. **RAID Level**: select Raid 5 (as an example)
  - e. **Capacity** : create 35GB or 60GB for OS partition
  - f. Hit Esc key then press Enter to create the volume
  - g. Choose **Background Initialization** to build array → press Enter
  - h. Repeat from step **a** to **g** for storage and for **Capacity** it will automatically display all remaining capacity that is available for the STORAGE volume.
- E. Check the building status on bottom line of screen for initialization of both partitions.
- F. Wait for both volumes initialization.

## 3- For the latest approved Areca driver:

Contact Support via email [Support@DNFSecurity.com](mailto:Support@DNFSecurity.com)

## 4- For Custom DNF Firmware which is optimized for your Falcon Series VME System

Contact Support via email [Support@DNFSecurity.com](mailto:Support@DNFSecurity.com)